

AMR-100 SETTINGS FOR WASHINGTON WATCH LIVE PROGRAM

Summary

Audio: Stereo

AMR-100 Virtual Port: TMAP2

Dates/Times: (Eastern)

Begins 1/14/2013 on Amb-OS

Monday-Friday 17:05:00-17:59:10

Technical help:

Amb-OS Support line: (877) 262-6728 (877-AMBOS2U)

Amb-OS Satellite Line (949) 681-7601

General Description

The Washington Watch *Live* program will come through the AMR-100 receiver via the Amb-OS delivery system. All live programs are assigned a virtual TMAP output and the AMR-100 receiver sets that to a specific physical output.

The Washington Watch *Live* program has been assigned TMAP2

Technical Description

The Washington Watch *Live* program needs to have an audio connection from the AMR-100 receiver to the station's air chain. The AMR-100 has two physical stereo ports on the back of the receiver. The audio can be assigned to be either stereo or mono.



The Washington Watch *Live* program can be assigned to either physical port as a stereo feed and also to either left or right of that port for a mono feed.

If you already have an audio connection from the AMR-100 to your audio chain, you will need to make sure TMAP2 is assigned to that port. A step by step instruction to do that is provided on the next page.

For a full description of the audio ports and TMAP description, please download the AMR-100 manual. It can be found at <http://www.amb-os.com/pdfs/installation.pdf>

Permissions

To request permission to carry the Washington Watch *Live* broadcasts email your request to programs@amb-os.com.

AUDIO SETUP INSTRUCTIONS FOR MAPPING THE AMR-100 RECEIVER

Target Map description

This menu allows you to change a target map to any of the analog targets. While your receiver may not have the same settings, the default mappings are:

TMAP1 – Stereo 1	[Audio port #1 with left and right (stereo)]
TMAP2 – Stereo 2	[Audio port #2 with left and right (stereo)]
TMAP3 – Mono 1 Left	[Audio port #1 with only the left side (mono)]
TMAP4 – Mono 1 Right	[Audio port #1 with only the right side (mono)]
TMAP5 – Mono 2 Left	[Audio port #2 with only the left side (mono)]
TMAP6 – Mono 2 Right	[Audio port #2 with only the right side (mono)]
TMAP7 – T2 (stereo)	[Emergency or “one off” program target]
TMAP8 – Stereo 1	[Audio port #1 with left and right (stereo)]
TMAP9 – Stereo 1	[Audio port #1 with left and right (stereo)]
TMAPA – Stereo 1	[Audio port #1 with left and right (stereo)]
TMAPB – Stereo 1	[Audio port #1 with left and right (stereo)]
TMAPC – Stereo 1	[Audio port #1 with left and right (stereo)]
TMAPD – Stereo 1	[Audio port #1 with left and right (stereo)]
TMAPE – Stereo 1	[Audio port #1 with left and right (stereo)]
TMAPF – Stereo 1	[Audio port #1 with left and right (stereo)]
TMAPG – Stereo 1	[Audio port #1 with left and right (stereo)]

Changing settings:

1. Press [ENTER] twice to enter the edit mode of the front panel settings (the Firmware X.XX should be highlighted)

```
Setup Date
Firmware: 2.61
Serial No: 2001000
IP Addr: DHCP
Receiver Utilities
```


2. Press [DOWN] until Target Map is highlighted

```
Setup Date
IP Addr: DHCP
Clock Interval
Closure Map
Target Map
```

3. Press [ENTER] to edit the target map and highlight TMAP2

```
Setup Date
TMAP1 Stereo 1
TMAP2 Stereo 2
TMAP3 Mono 1 Left
TMAP4 Mono 1 Right
```

4. Press [ENTER] to change the mapping
Since the *Live Washington Watch* program will be on TMAP2, only that one will need modifying. If TMAP2 is already assigned to the desired physical audio port, nothing needs to be changed.
5. Each time you press [ENTER], the mapping will change. Keep pressing [ENTER] until you have the mapping you need. The *Live Washington Watch* program will use TMAP2.
6. Press [BACK] to save your setting

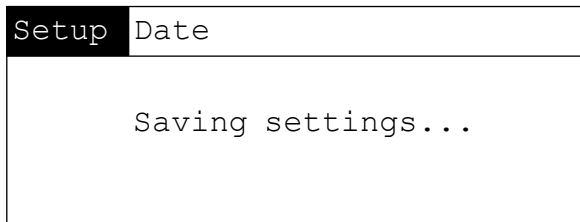

Testing your audio settings:

Since audio is present on TMAP2 only while the live program is active, the following procedure details how you might play a pre-recorded program (demonstrating where, during the actual live broadcast, the live audio will appear) utilizing the same audio path that will be used for the live program.

1. If you don't already utilize our User Interface (UI) software, download the latest version at <http://www.amb-os.com/ui>. Version 016qh and later have the necessary test functionality built-in. If you are using an earlier UI version upgrade to the latest version – any present rename, playlist, or system information should be retained from your previous version.
2. Beginning with AMR firmware version 2.61 TMAP8 – TMAPG virtual ports were added..To access these additional virtual ports UI version 1.31.11 or later is needed.
3. Start the UI and then select “Tools” then “Play any file” from the UI’s top menu bar. The UI will respond by displaying the window shown below.
4. Left-click on any file shown in the “Select file to play” list box (note: there are no files associated with your actual live program-any file will suffice for this test) and then left-click on the output port where you desire the audio to be sent. In this case, select where the live audio will be sent, virtual port TMAP2. Note: The physical ports displayed (Stereo 2 [T2], etc.) after the virtual ports Tmap1-Tmap7 indicate the current virtual to physical port mapping.
5. Taking care to ensure that there are no other playbacks in progress on physical ports that might be impacted, click on the “Play” button and check to see that the test audio appears where you expect it for the live program. To stop the playback before the end of the test program click the “Stop” button. To exit out of the test mode (UI transfers and playlists are not suspended while testing) click the “Exit” button.
6. Some PC operating systems and/or network configurations don't readily pass the commands sent by the “Play any file” page - If play commands don't work in your installation try checking the HTML mode in the Interface box in the lower right corner of the page.



If questions arise, call our Amb-OS support line: (877-AMBOS2U) or email support@amb-os.com.

Select file to play

- AFRN_AFN5_04-12-18_01-01_MP2
- AFRN_AFN5_04-13-18_01-01_MP2
- AFRN_SPT1_04-09-18_01-04_MP2
- AFRN_SPT1_04-09-18_02-04_MP2
- AFRN_SPT1_04-09-18_03-04_MP2
- AFRN_SPT1_04-09-18_04-04_MP2
- AFRN_SPT1_04-16-18_01-04_MP2
- AFRN_SPT1_04-16-18_02-04_MP2
- AFRN_SPT1_04-16-18_03-04_MP2
- AFRN_SPT1_04-16-18_04-04_MP2
- AFRN_WR11_04-07-18_01-01_MP2
- AFRN_WR11_04-14-18_01-01_MP2
- AFRN_WR21_04-07-18_01-01_MP2
- AFRN_WR21_04-14-18_01-01_MP2
- AFTR_AFT1_04-08-18_01-01_MP2
- AFTR_AFT1_04-15-18_01-01_MP2
- AGLX_DLD5_04-12-18_01-01_MP2
- AGLX_DLD5_04-13-18_01-01_MP2**
- AGLX_DLD5_04-16-18_01-01_MP2
- AGLX_DLD5_04-17-18_01-01_MP2
- AGLX_DLD5_04-18-18_01-01_MP2
- AGLX_LIL1_04-08-18_01-01_MP2
- AGLX_LIL1_04-15-18_01-01_MP2
- AGLX_LL3P_04-08-18_01-01_MP2
- AGLX_LL3P_04-15-18_01-01_MP2
- AIGM_AKH5_04-12-18_01-01_MP2
- AIGM_AKH5_04-13-18_01-01_MP2
- AIGM_AKH5_04-16-18_01-01_MP2
- AIGM_AKH5_04-17-18_01-01_MP2
- ALTS_BGPL_04-09-18_01-01_MP2
- ALTS_BGPL_04-10-18_01-01_MP2
- ALTS_BGPL_04-11-18_01-01_MP2
- ALTS_BGPL_04-12-18_01-01_MP2
- ALTS_BGPL_04-13-18_01-01_MP2
- ALTS_EL2R_04-09-18_01-01_MP2

Select output port

- Stereo 1 T1
 - Stereo 2 T2
 - TMAP1
 - TMAP2
 - TMAP3
 - TMAP4
 - TMAP5
 - TMAP6
 - TMAP7
 - TMAP8
 - TMAP9
 - TMAPA
 - TMAPB
 - TMAPC
 - TMAPD
 - TMAPE
 - TMAPF
 - TMAPG
- | | |
|--|------------------|
| <input type="radio"/> Mono 1 Left T1L | Stereo 1 T1 |
| <input type="radio"/> Mono 1 Right T1R | Stereo 2 T2 |
| <input type="radio"/> Mono 2 Left T2L | Mono 1 Left T1L |
| <input type="radio"/> Mono 2 Right T2R | Mono 1 Right T1R |
| | Mono 2 Left T2L |
| | Mono 2 Right T2R |
| | Stereo 2 T2 |
| | Stereo 1 T1 |
| | Stereo 1 T1 |
| | Stereo 1 T1 |
| | Stereo 1 T1 |
| | Stereo 1 T1 |
| | Stereo 1 T1 |
| | Stereo 1 T1 |
| | Stereo 1 T1 |
| | Stereo 1 T1 |
| | Stereo 1 T1 |
| | Stereo 1 T1 |

Edit Tmaps

Tmaps can be changed here. Changes do not take effect until saved.

Interface

If play any file or changing tmaps doesn't work, try...

HTML mode

Arm TMAP7 - must be armed before use